




Micro Music Watch Instruction

Ages 5 & Up
Item No. 59947

We hope you enjoy your new HitClips watch - it's a functioning timepiece as well as a portable micro music mix music player! Just put it on and you're good to go!

Includes: Watch

Earbud headset
HitClips Micro Music Clip

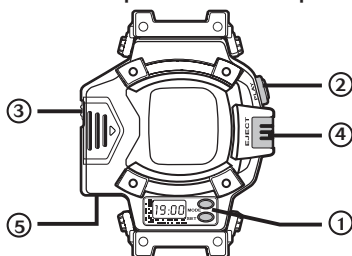

1. Mode and Set buttons (bottom and top buttons near clock)
2. Play/stop button
3. Volume control switch
4. Eject button
5. Headphone (plug-in)

Watch functions

There are two buttons by the clock display, the **MODE** button (top) and the **SET** button (bottom). You may need to use a fine point to press the buttons, such as a ball-point pen.

To set the date:

Press the Set button (bottom) twice. You should now see a number that represents the month. Press the Mode button to cycle the months to the correct one. When you have reached the right number, press the Set button to move to the day. Press the Mode button to cycle through until you reach the correct day. Press the Set button to confirm your choice.

To set the time:

After setting the month and day, the display will automatically change, allowing you to set the hour (12-hour cycle, including a.m. and p.m.). Press the Mode button to cycle through the hours to the correct one. Press the Set button to move to minutes. Cycle through

the minutes by pressing the Mode button. When the minutes are correct press the Set button to confirm. Now the time and date are set!

If you want to check the date, press the Mode button. Press it again to check the seconds, and one more time to return to the clock.

NOTE: Once the time and date are set, the LCD display will only show the time. You may still press the Set button to cycle through and see the date if you wish.

If you would like the time and date to alternate one at a time on the LCD screen automatically, simply press the Set button once. The date will flash for 2 seconds and then the time will flash for 2 seconds. This will continue until the Mode or Set buttons are pressed again.


To play a HitClips Micro Music Clip:

Carefully insert the HitClips chip into the slot. Plug the earbud jack into the proper hole. Play and stop by pressing the Play/Stop button. Adjust the volume by using the Volume Control switch (low and high).

To eject a HitClips Micro Music Clip:

Press the Stop button to stop the music, then press the Eject button and carefully remove the HitClips Micro Music Clip.

Battery Installation

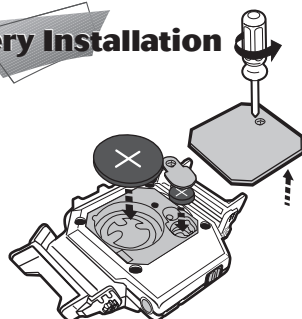

1. Unscrew battery door. (see diagram)
2. Remove used batteries and dispose of properly.
3. Insert 1 new CR2032 and 1 GP364 / SR60 batteries.
4. Replace batteries door and tighten screw.

To ensure proper function

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire, batteries may explode or leak.

WARNING:
CHOKING HAZARD - SMALL PARTS.
NOT FOR CHILDREN UNDER 3 YEARS.

90-Day Limited Warranty

Tiger Electronics(Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$10.00. Payments must be by check or money order payable to Tiger Electronics.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

**Tiger Repair Department
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, USA**

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary, from state to state.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com

Please retain instructions for future reference.

TIGER
ELECTRONICS



A division of Hasbro, Inc.
Where Technology Comes to Play!™

©, TM, & © 2001 Tiger Electronics
All rights reserved.
980 Woodlands Parkway,
Vernon Hills, IL 60061, USA
www.tigertoys.com

PRINTED IN CHINA

200104020IWTI-02