

Thank you for purchasing KOTA the Triceratops.

Be sure to read and follow all instructions carefully before using this product.

Adult assembly required.

Phillips/cross head screwdriver
(not included) required to
complete assembly.

For indoor use only.

INCLUDED:

Kota, tail, "leaves".



x6
1.5V or
LR20 size

**ALKALINE
BATTERIES
REQUIRED
NOT INCLUDED**

Phillips/cross head
screwdriver
(not included)
needed to insert
batteries.

PLAYSKOOL

believe in PLAY™







kota
the triceratops™

MAXIMUM WEIGHT 60lbs/27kg

ages &
stages™

AGES
3+


ASSEMBLY:

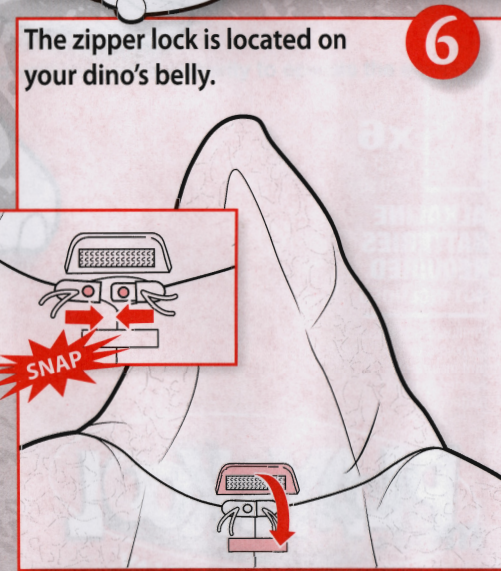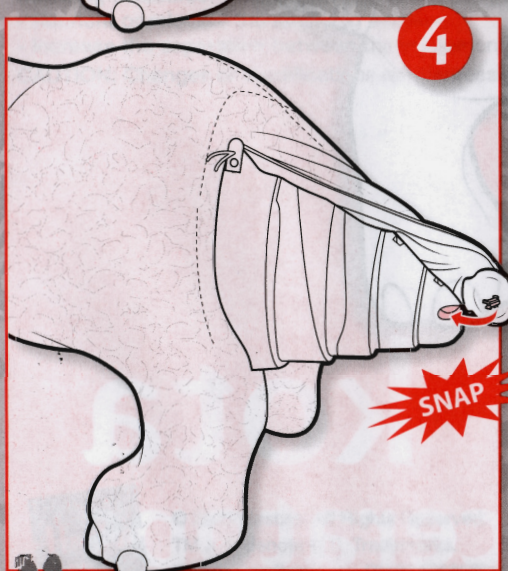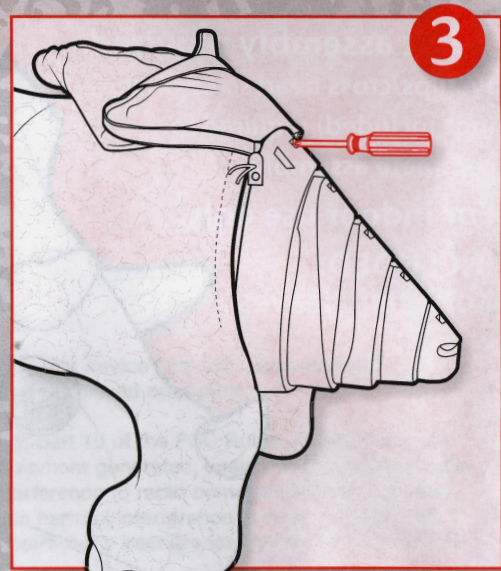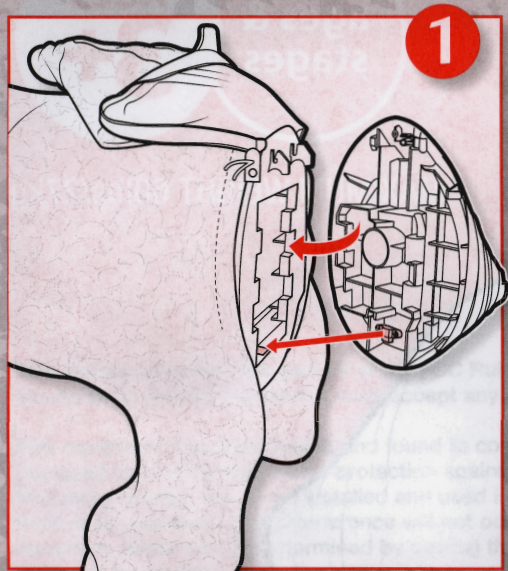

INSERTING BATTERIES:


The battery box is located on your dino's belly.

1

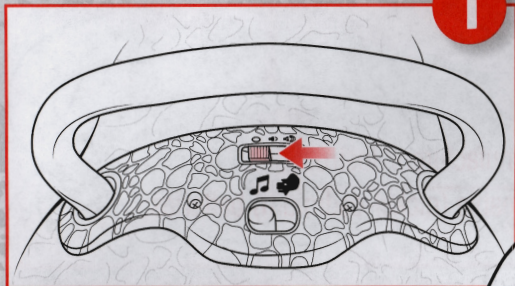


Slide switch to "OFF" prior to installing batteries.

2

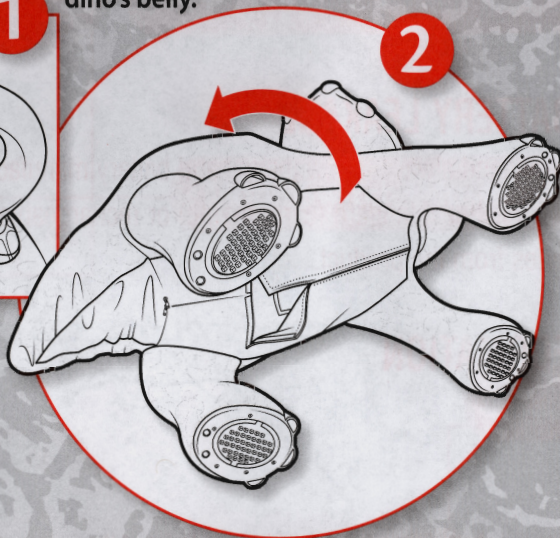


3


Screws will remain attached to battery cover.

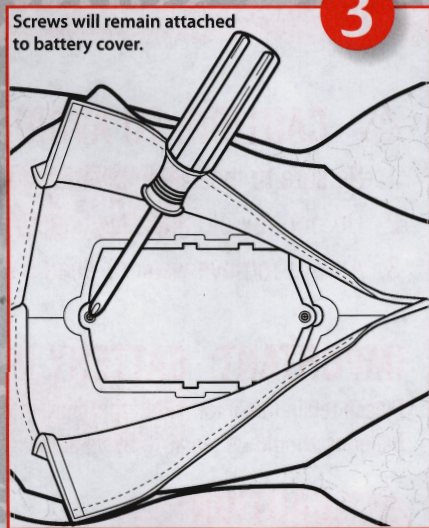

4

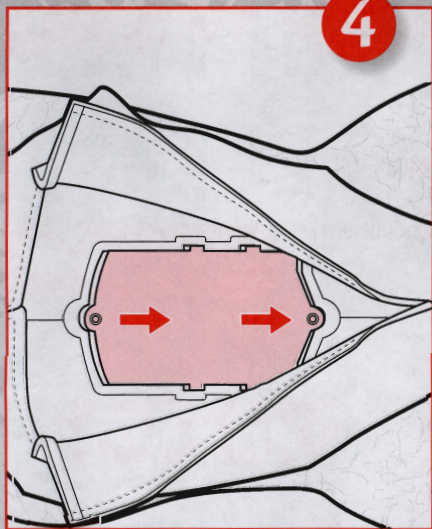


5

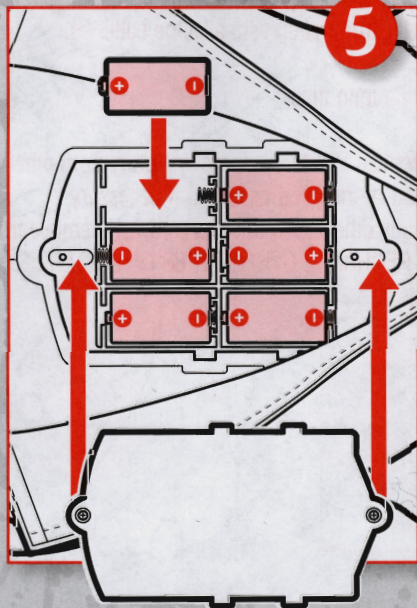

6

Be sure battery cover is tightly secured.

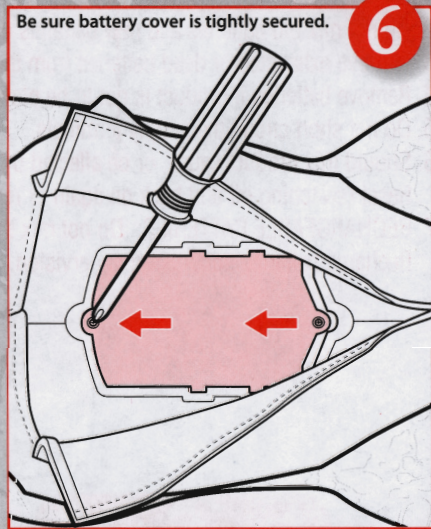

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.


IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment.
Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging.
Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

Playing with KOTA the Triceratops:

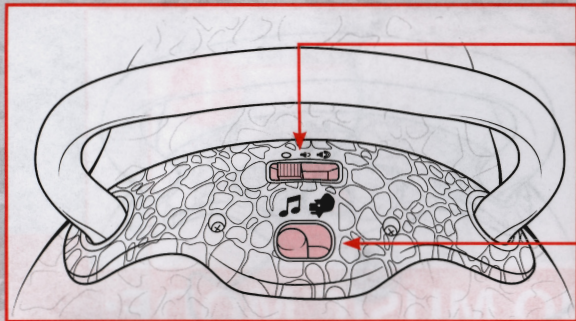

Power/Volume Switch (Off – Low Volume – High Volume)

Mode Switch (Music - Normal Play)

Your dino has 10 sensors that detect touch, sound, or weight.

Forehead (sound)

3 Horns (touch)

Mouth (press)


Chin (touch)

Back (weight)

Tail (touch)

2 Sides (touch)


Playing with KOTA the Triceratops:

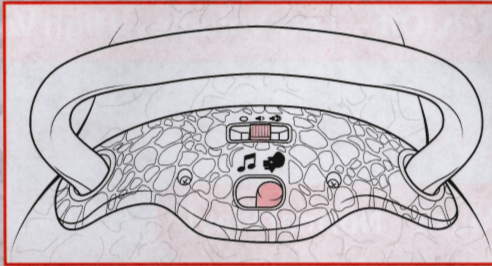

DINO PLAY MODE:

- Touch any of your dino's touch sensors to hear dino sounds.
- Scratch his chin to "relax" him. Scratch his chin 4 times to put him to "sleep".
- Roar at him, or talk to him to hear your dino roar back.
- Get on your dino's back and bounce for stomping sounds.

Always "ride" your dino on a flat, stable surface and hold the handle!

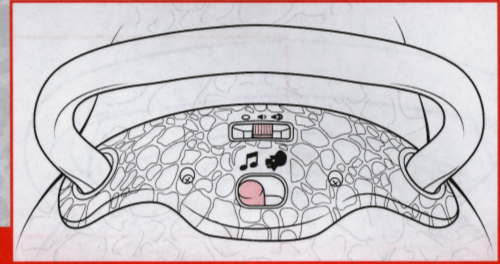

DINO MUSIC MODE:

- Touch your dino's horns for different musical notes.
- Get on your dino's back and bounce to hear 1 of 4 dino adventure songs. Sometimes, you might need to keep bouncing to hear a whole song. Always "ride" your dino on a flat, stable surface and hold the handle!

NOTE: Your dino's rear end must compress at least .5"/1.5cm for sounds to activate.


NOTE: After 60-90 seconds with no interaction, your dino will go to "sleep". To "wake him up" again, "feed" him, or get on his back and bounce.

NOTE: To conserve batteries, slide switch to "OFF" position when you're not playing with your dino.

To feed KOTA the Triceratops:



Open your dino's mouth.

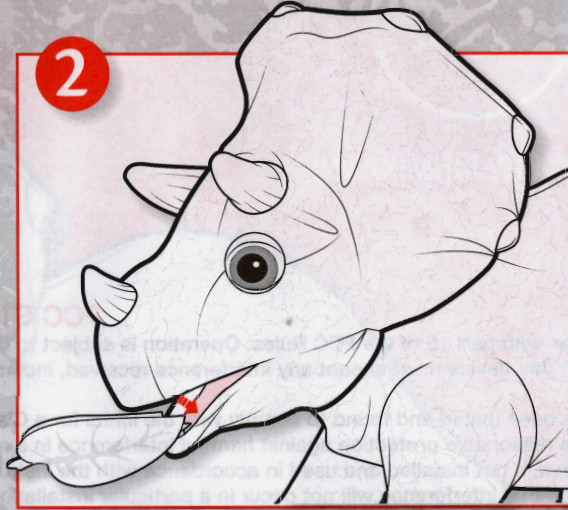

Care & Cleaning Instructions:

Gently brush with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- To prevent staining, wipe off dirt immediately.
- Do not get wet; to remove stains use only a slightly damp cloth.
- Do not use detergent or stain removers.
- If dino gets wet, remove batteries and let dry; once dino is completely dry, replace batteries.
- Avoid spilling food or beverages on the dino.




FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



© 2008 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
Patent Pending. PN 6832560001



Not suitable for children under 3 years
because of small parts – choking hazard.

Visit
PLAYSKOOL
.com

Questions? Call 1-800-PLAYSKL